 
 
 
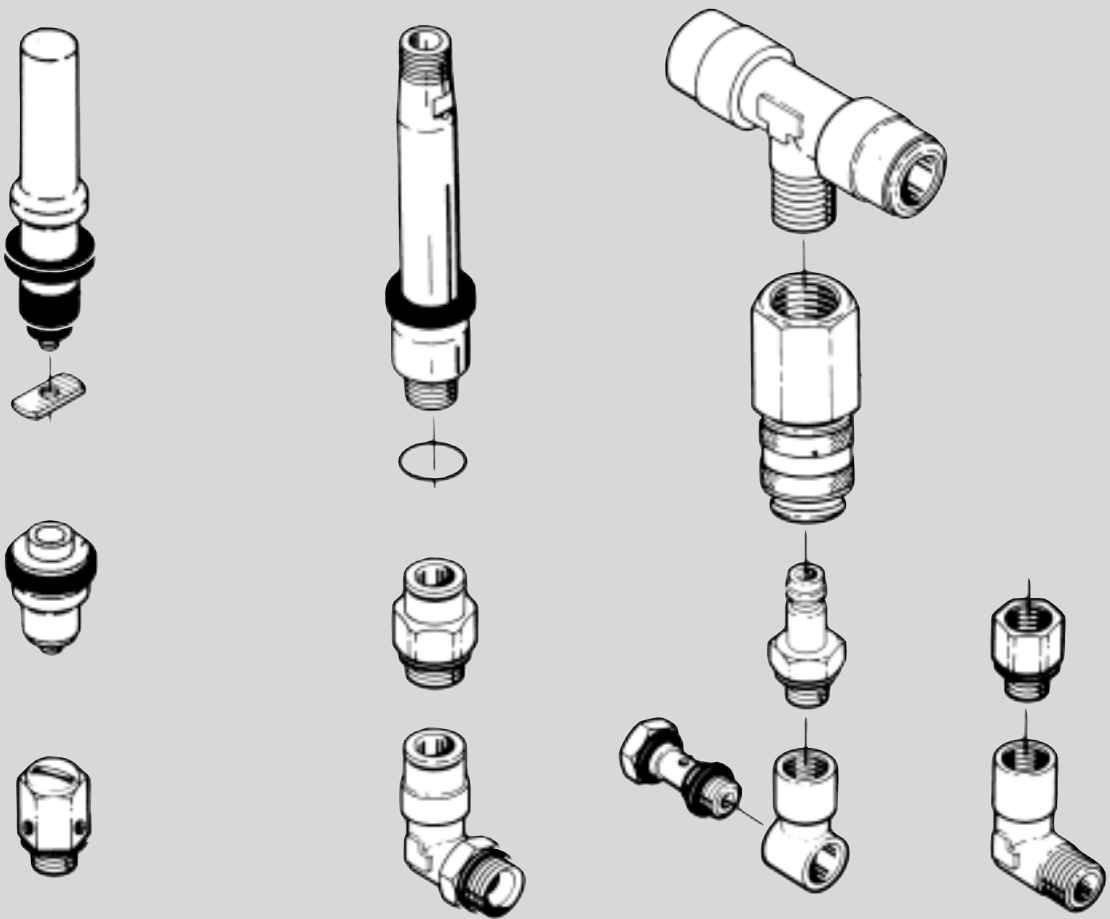 


Spare Parts List
LKT-S Top Unit

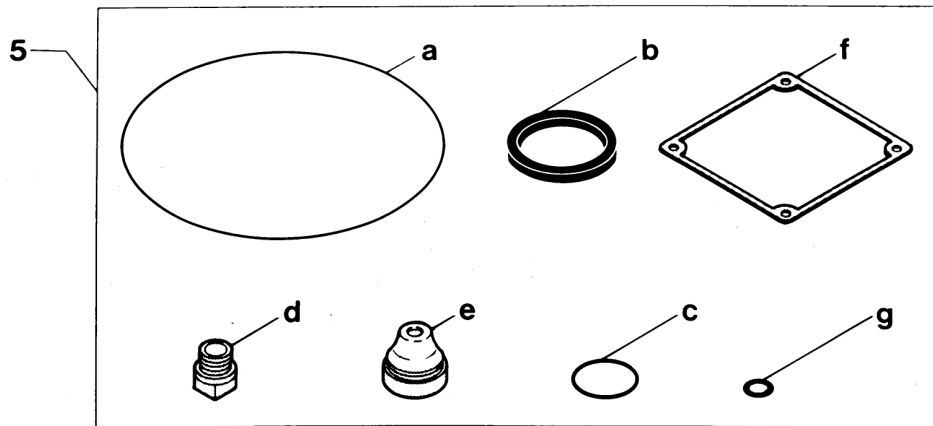

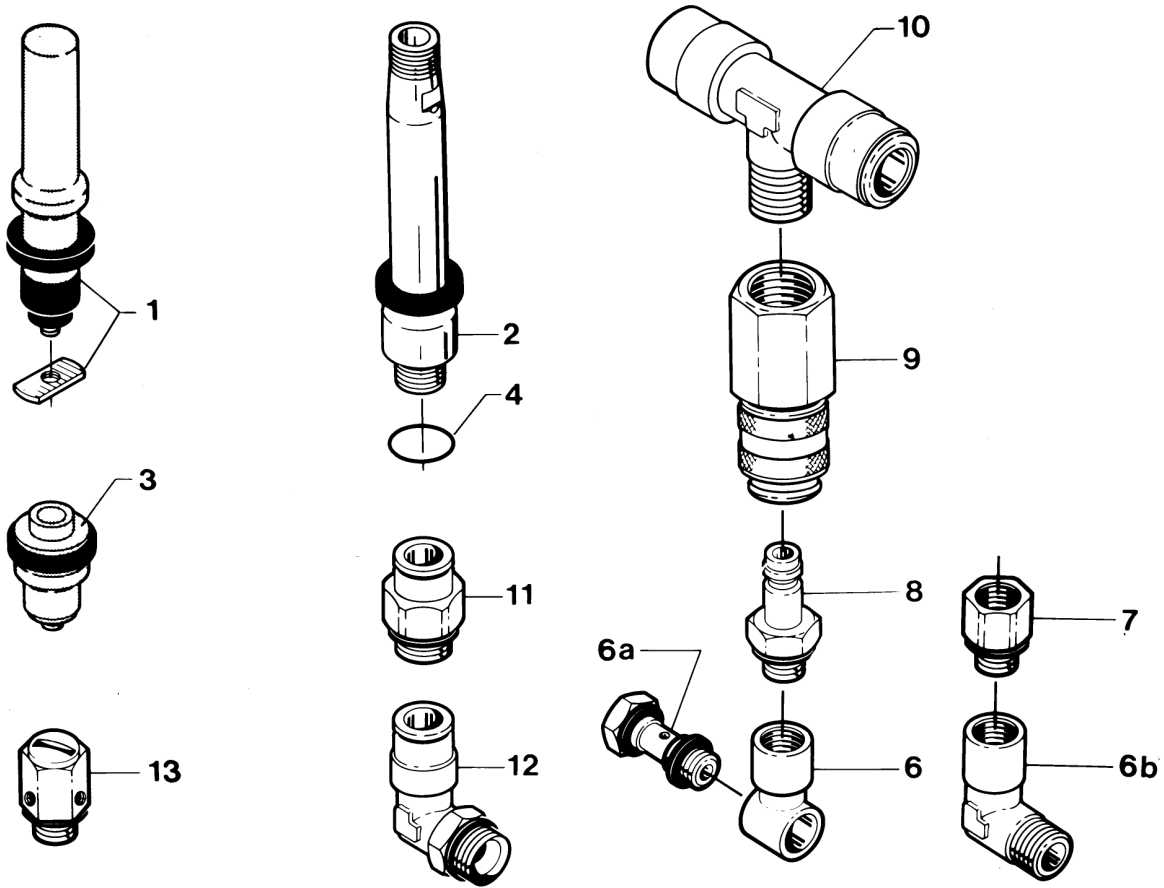

Pos.	Qty.	Description	SRC ARC SMP-SC SMP-BC Part No.	SMP-EC Part No.	LKLA-T Part No.	SMP-SC Spillage- free/SMP-TO 5-6" SRC/ARC/ SMP-BC/SMP-SC Part No.
1	1	Extension set for hall proximity switches	9612-3065-01	N/A	N/A	N/A
2	1	Extension for hall proximity switches	N/A	9612-0851-01	N/A	N/A
3	1	Extension for hall proximity switches	N/A	N/A	9612-1938-01	9612-4117-02
4	1	O-ring, EPDM	N/A	223403-80	N/A	N/A
5	1	Fittings and seals set	9611-92-0182	9611-92-0182	9611-92-0182	9611-92-0182
a	1	O-ring, NBR	9611-99-2704	9611-99-2704	9611-99-2704	9611-99-2704
b	1	Quad-ring, NBR	9611-99-2656	9611-99-2656	9611-99-2656	9611-99-2656
c	1	O-ring, NBR	9611-99-2129	9611-99-2129	9611-99-2129	9611-99-2129
d	1	Plug R 1/8" (BSP)	9611-99-1221	9611-99-1221	9611-99-1221	9611-99-1221
e	1	Seal for air tube	9611-99-2121	9611-99-2121	9611-99-2121	9611-99-2121
f	1	Seal for LKT-S box	9612-0854-01	9612-0854-01	9612-0854-01	9612-0854-01
g	1	Seal for screw	9611-99-2775	9611-99-2775	9611-99-2775	9611-99-2775
6	1	Air fitting (Period 9408 -)	9611-99-2911	9611-99-2911	9611-99-2911	9611-99-2911
a	1	Air fitting (Period 9408 -)	9611-99-2912	9611-99-2912	9611-99-2912	9611-99-2912
b	1	Air fitting (Period 9304-9408)	9611-99-2122	9611-99-2122	9611-99-2122	9611-99-2122
7	1	Pipe bushing (Period 9304-9408)	9611-99-2521	9611-99-2521	9611-99-2521	9611-99-2521
8	1	Quick coupling/male	9611-99-2124	9611-99-2124	9611-99-2124	9611-99-2124
9	1	Quick coupling/female	9611-99-2123	9611-99-2123	9611-99-2123	9611-99-2123
10	1	Air fitting, tee	9611-99-2125	9611-99-2125	9611-99-2125	9611-99-2125
11	1	Air fitting	9611-99-1987	9611-99-1987	9611-99-1987	9611-99-1987
12	1	Swivel air fitting, 90°	9611-99-1988	9611-99-1988	9611-99-1988	9611-99-1988
13	1	Safety valve	9611-99-2928	9611-99-2928	9611-99-2928	9611-99-2928

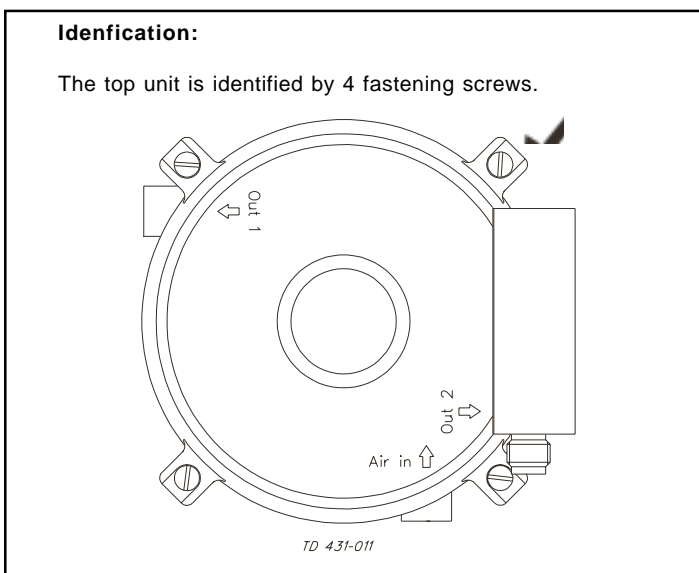

Alfa Laval

Alfa Laval

8201 104th Street
Pleasant Prairie, WI 53158-0909
Telephone: 800-558-2060
Fax: 262-947-4724
www.us.flow.alfalaval.com