



Spare Parts List

ARC-SB Shut-off Seat Valve

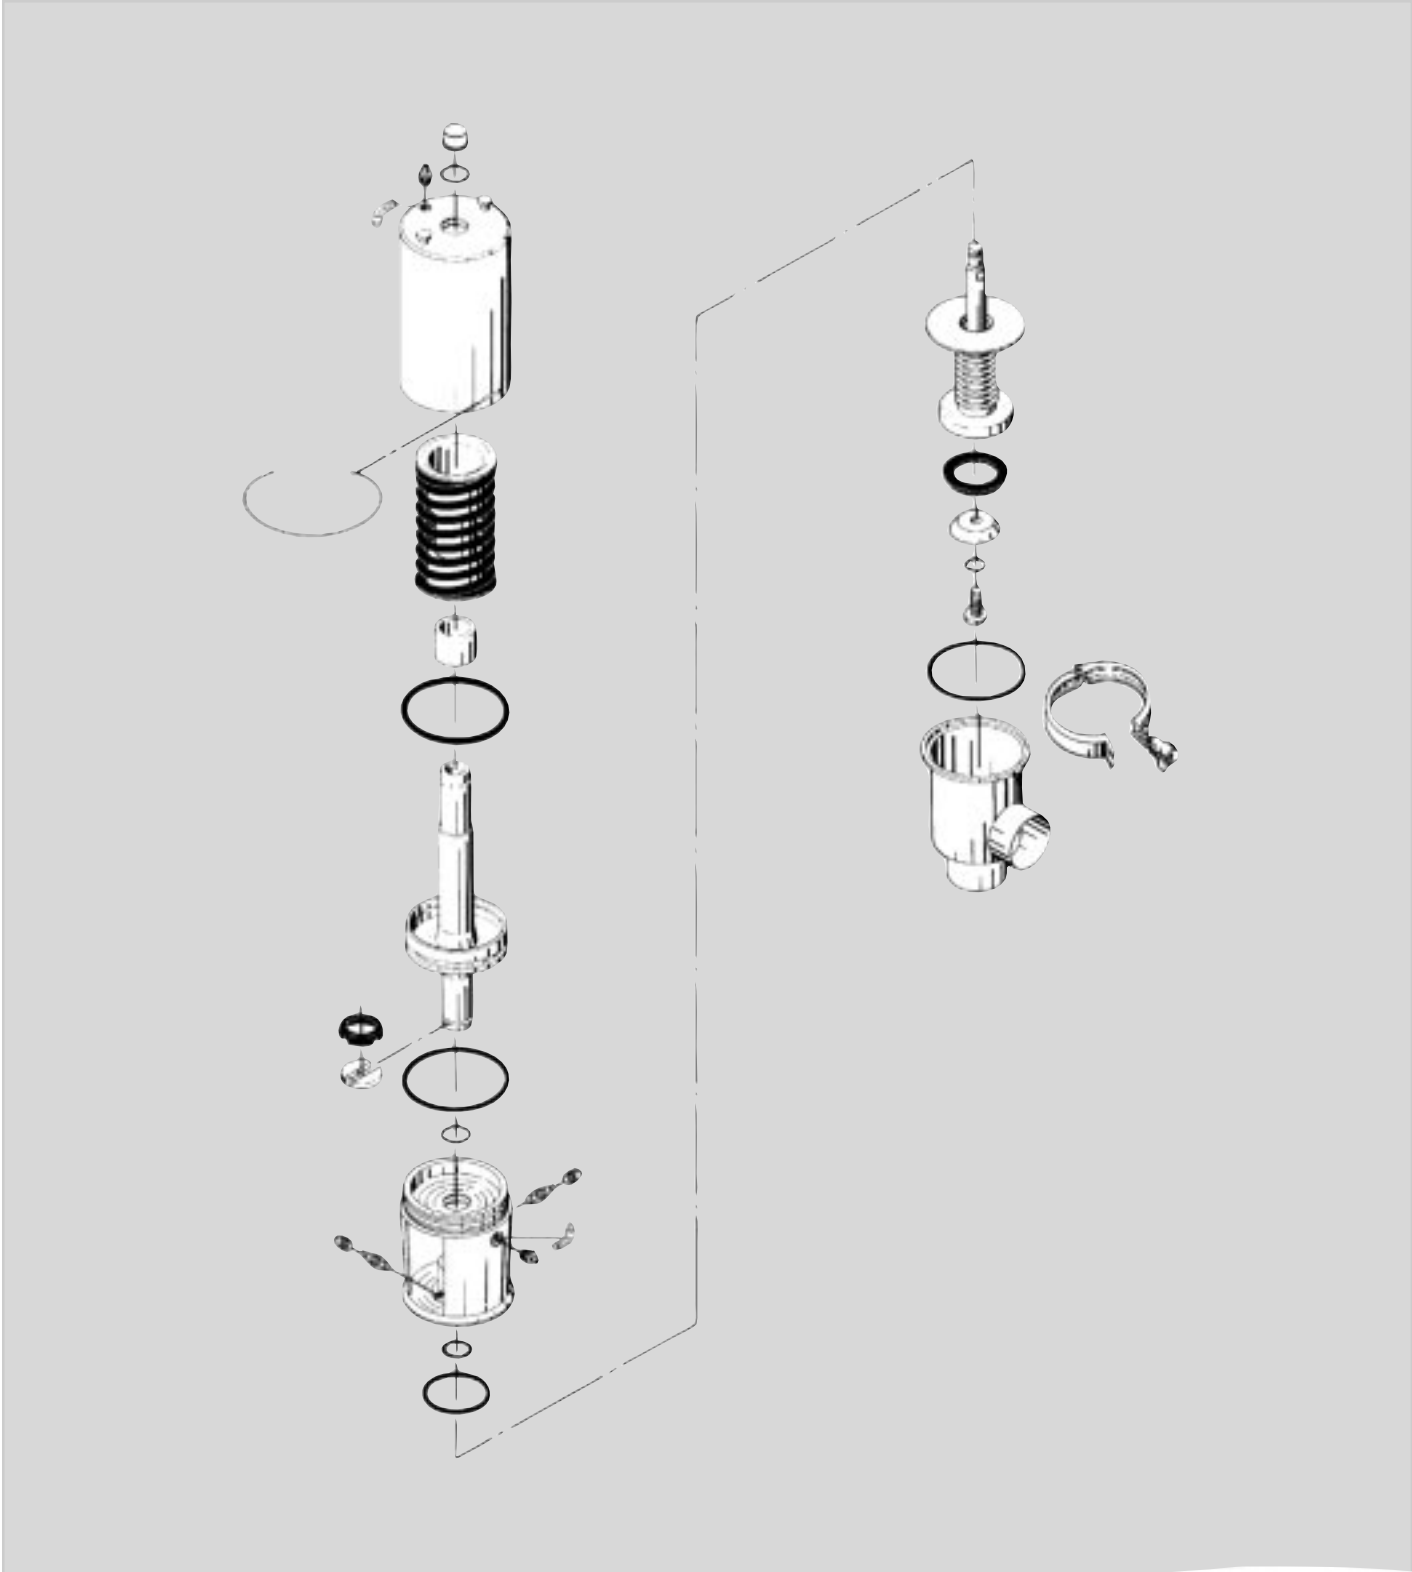

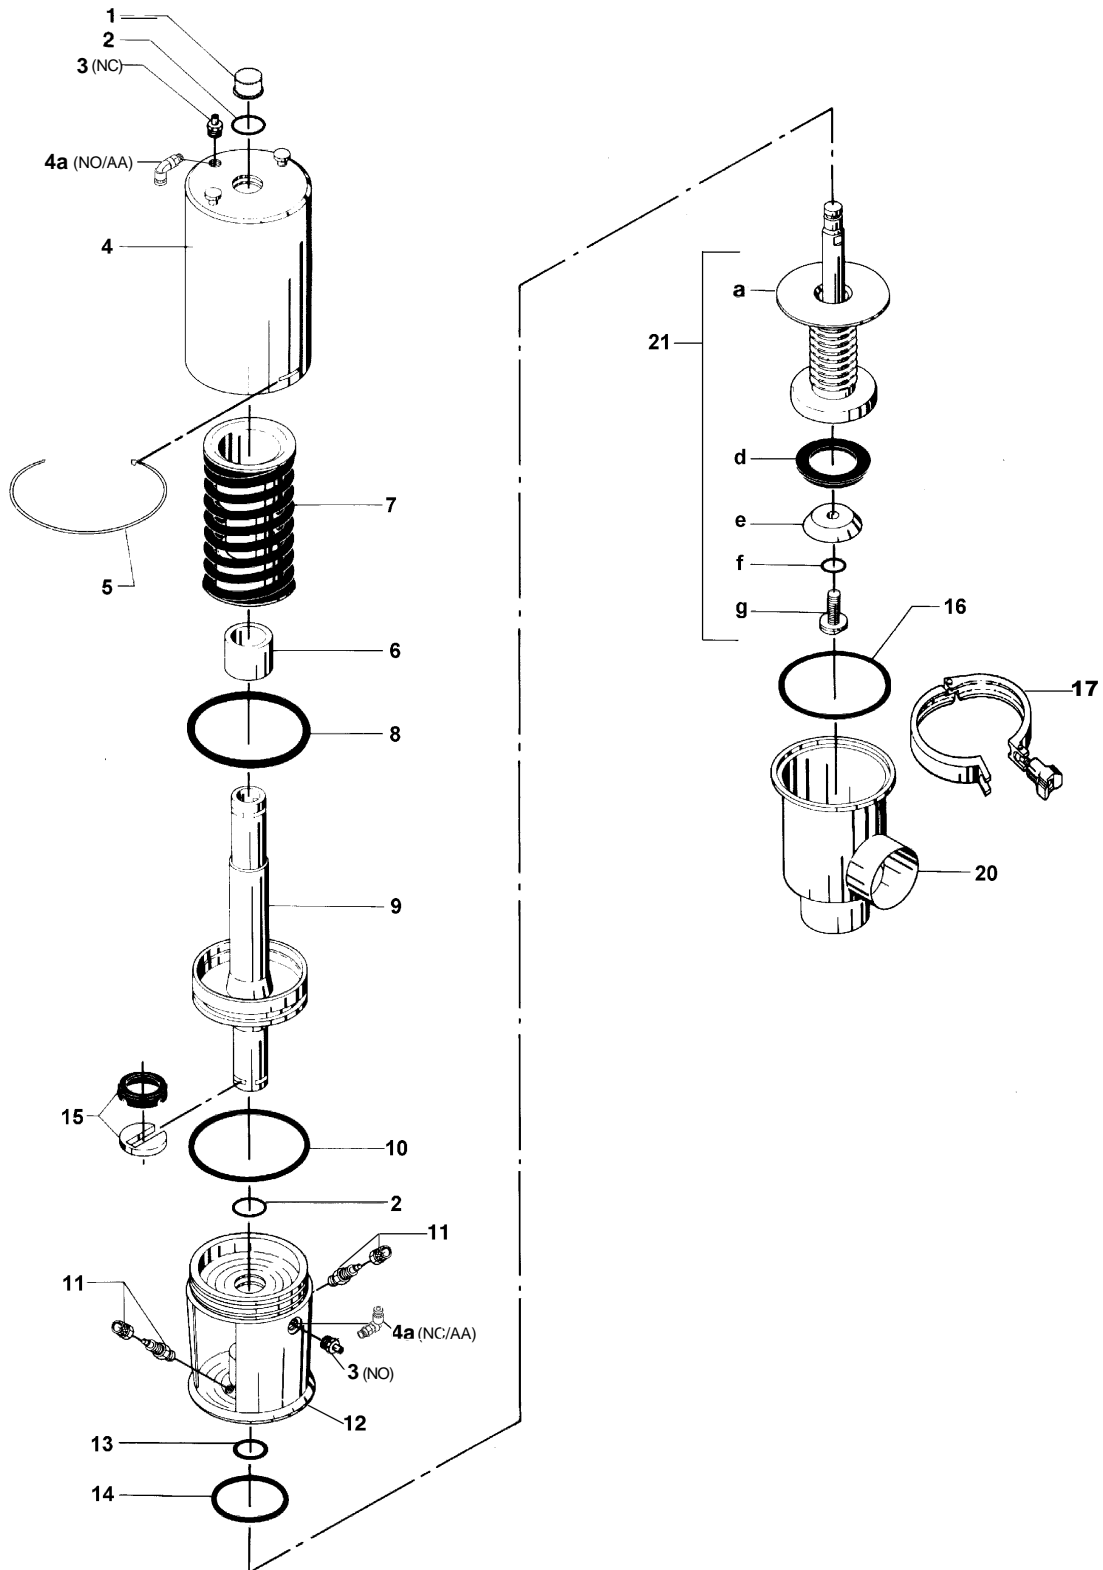

Aseptic Remote Controlled Valve ARC-SB Shut-off Valve

Actuator

Pos.	Qty.	Description	1.5" Part No.	2" Part No.	2.5" Part No.
	1	Complete actuator-10 (NO) industrial	9612-1883-01	9612-1883-01	9612-1883-01
	1	Complete actuator-20 (NC) industrial	9612-1883-02	9612-1883-02	9612-1883-02
	1	Complete actuator-30 (A/A) industrial	9612-1883-03	9612-1883-03	9612-1883-03
	1	Complete actuator-10 (NO) polished	9612-1883-06	9612-1883-06	9612-1883-06
	1	Complete actuator-20 (A/A) polished	9612-1883-07	9612-1883-07	9612-1883-07
1	1	Cap	31801-0525-6	31801-0525-6	31801-0525-6
2Δ	2	O-ring, NBR	223406-25	223406-25	223406-25
3	1	Exhaust plug (NO)	31353-0154-1	31353-0154-1	31353-0154-1
	1	Exhaust plug (NC)	31353-0154-1	31353-0154-1	31353-0154-1
4	1	Cylinder	31353-0139-1	31353-0139-1	31353-0139-1
4a	1	Air fitting (NO)	881-249420	881-249420	881-249420
	1	Air fitting (NC)	881-249420	881-249420	881-249420
	2	Air fitting (A/A)	881-249420	881-249420	881-249420
5Δ	1	Lock wire	31353-0151-1	31353-0151-1	31353-0151-1
6	1	Stop ring	9612-1878-01	9612-1878-01	9612-1878-01
7	1	Spring assembly (standard black)	31353-0625-1	31353-0625-1	31353-0625-1
	1	Spring assembly with strong spring (white)	31353-0625-2	31353-0625-2	31353-0625-2
8Δ	1	O-ring, NBR	223401-74	223401-74	223401-74
9	1	Piston for NO and NC	31353-0621-1	31353-0621-1	31353-0621-1
	1	Piston for Air/Air	31353-0621-2	31353-0621-2	31353-0621-2
10Δ	1	O-ring, NBR	223406-67	223406-67	223406-67
11	2	Drain tube	31801-1444-1	31801-1444-1	31801-1444-1
12	1	Bonnet	9612-1881-01	9612-1881-01	9612-1881-01
13Δ	1	O-ring	9611-99-0011	9611-99-0011	9611-99-0011
14Δ	1	O-ring	9611-99-2620	9611-99-2620	9611-99-2620
15Δ	1	Clip complete	31353-0793-1	31353-0793-1	31353-0793-1
Δ	1	Service kit for actuator	9611-92-0255	9611-92-0255	9611-92-0255

Parts marked with Δ are included in the actuator service kit.

Valve Parts

Pos.	Qty.	Description	1.5" Part No.	2" Part No.	2.5" Part No.
Seal rings					
16Δ	1	Seal ring, EPDM (standard)	31353-0128-1	31353-0128-1	31353-0128-1
	1	Seal ring, NBR	31353-0128-2	31353-0128-2	31353-0128-2
	1	Seal ring, FPM	31353-0128-3	31353-0128-3	31353-0128-3
	1	Seal ring, PTFE	31353-0128-4	31353-0128-4	31353-0128-4
Clamp					
17	1	Heavy duty clamp	9612-0112-04	9612-0112-04	9612-0112-04
Valve body (industrial)					
20	1	Valve body, 2 ports, weld	9612-1830-01	9612-1833-01	31353-0380-1
	1	Valve body, 3 ports, weld	9612-1830-02	9612-1833-02	31353-0380-6
Valve body (polished)					
20	1	Valve body, 2 ports, clamp	884-41543	884-42686	31353-1030-3
	1	Valve body, 2 ports, weld	9612-1830-05	9612-1833-05	31353-1102-1
	1	Valve body, 3 ports, clamp	884-42685	884-42687	31353-1031-3
	1	Valve body, 3 ports, weld	9612-1830-06	9612-1833-06	31353-1102-2

Recommended Spare Parts: Service kit

Alfa Laval

Valve Parts (continued)

Pos.	Qty.	Description	1.5" Part No.	2" Part No.	2.5" Part No.
Valve plug					
21	1	Plug double, complete, EPDM (standard)	9612-4209-04	9612-4209-05	9612-4209-06
	1	Plug double, complete, NBR	9612-4209-10	9612-4209-11	9612-4209-12
	1	Plug double, complete, FPM	9612-4209-16	9612-4209-17	9612-4209-18
	1	Plug double, complete, PTFE	9612-4209-22	9612-4209-23	9612-4209-24
a *	1	Stem, double	9612-4208-04	9612-4208-05	9612-4208-06
d Δ	1	Seal ring, EPDM (standard)	31353-0320-1	31353-0321-1	31353-0322-1
	1	Seal ring, NBR	31353-0320-2	31353-0321-2	31353-0322-2
	1	Seal ring, FPM	31353-0320-3	31353-0321-3	31353-0322-3
	1	Seal ring, PTFE	31353-1211-1	31353-1212-1	31353-1213-1
e	1	Washer	31353-1010-1	31353-1010-2	31353-1010-3
f Δ	1	O-ring, EPDM (standard)	990034-01	990034-01	990034-01
	1	O-ring, NBR	223404-21	223404-21	223404-21
	1	O-ring, FPM	223404-35	223404-35	223404-35
	1	O-ring, PTFE	9612-4330-01	9612-4230-01	9612-4330-01
g	1	Screw	31353-1011-1	31353-1011-1	31353-1011-1
Δ	1	Service kit for valve, EPDM	9611-92-0322	9611-92-0326	9611-92-0330
Δ	1	Service kit for valve, NBR	9611-92-0323	9611-92-0327	9611-92-0331
Δ	1	Service kit for valve, FPM	9611-92-0324	9611-92-0328	9611-92-0332
Δ	1	Service kit for valve, PTFE	9611-92-0325	9611-92-0329	9611-92-0333

* The steel bellows are eligible for repair. In case of broken steel bellows please contact your supplier.

Parts marked with Δ are included in the valve service kit.

Valve Body Combinations:

Type 7



Type 9



Recommended Spare Parts: Service kit

Alfa Laval Flow Inc.
8201 104th Street
Pleasant Prairie, WI 53158-0909
Telephone: 800-558-2060
Fax: 262-947-4724
www.us.flow.alfalaval.com